



ACOUSTICORE ANCHOR INSTALLATION INSTRUCTIONS


STEP 1: DRILL A 1/4" HOLE 5/8" DEEP AT EACH ANCHOR LOCATION, DO NOT DRILL THROUGH THE FACE OF THE PANEL.

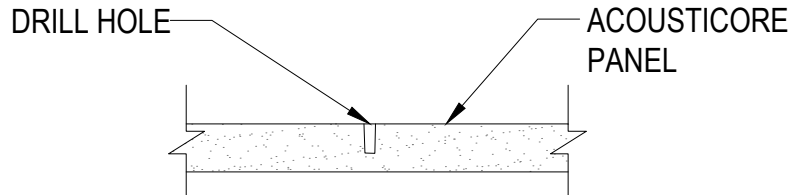

STEP 2: USING A #2 PHILLIPS BIT, SCREW THE ANCHOR CLOCKWISE INTO THE 1/4" HOLE UNTIL FLUSH WITH THE PANELS SURFACE. DO NOT OVER TIGHTEN.

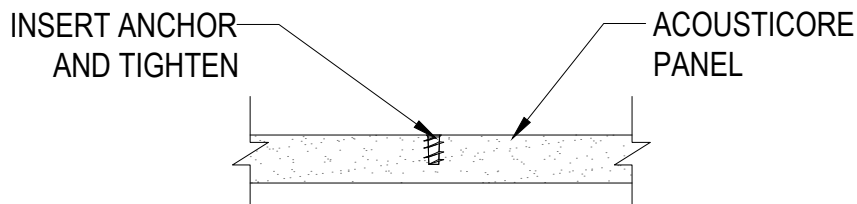

STEP 3: INSERT THE INCLUDED 3/4" #8 PAN HEAD SCREW THROUGH THE MOUNTING HARDWARE INTO THE ANCHOR, THEN TIGHTEN. (Z-CLIP, LIFT AND SHIFT, LIFT AND TWIST, SAFETY, OR TORSION SPRING CLIP).

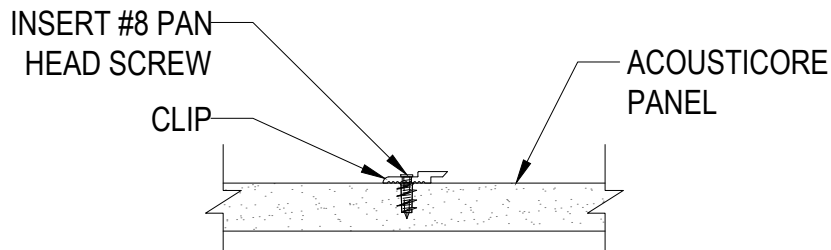

acoustigreen

123 Columbia Court North Chaska, MN 55318 (888) 258 4637

COPYRIGHT ACOUSTIGREEN © 2015

DRAWING NAME:

ACOUSTICORE ANCHOR INSTALLATION INSTRUCTIONS

DRAFTED BY: BCO

LAST REVISED: 11/24/15

SCALE: NTS

DO NOT SCALE DRAWING. FIGURED DIMENSIONS ARE TO BE FOLLOWED. READ THIS DRAWING IN CONNECTION WITH GENERAL ARCHITECTURAL PLANS, STRUCTURAL PLANS, AND OTHER RELATED DRAWINGS. THESE DRAWINGS REPRESENT ACOUSTIGREEN'S UNDERSTANDING AND INTERPRETATION OF THE ARCHITECTURAL DRAWINGS AND HOW ACOUSTIGREEN PRODUCTS RELATE TO THE PROJECT.